


PARTS LIST HIGH SIDE FLOATS

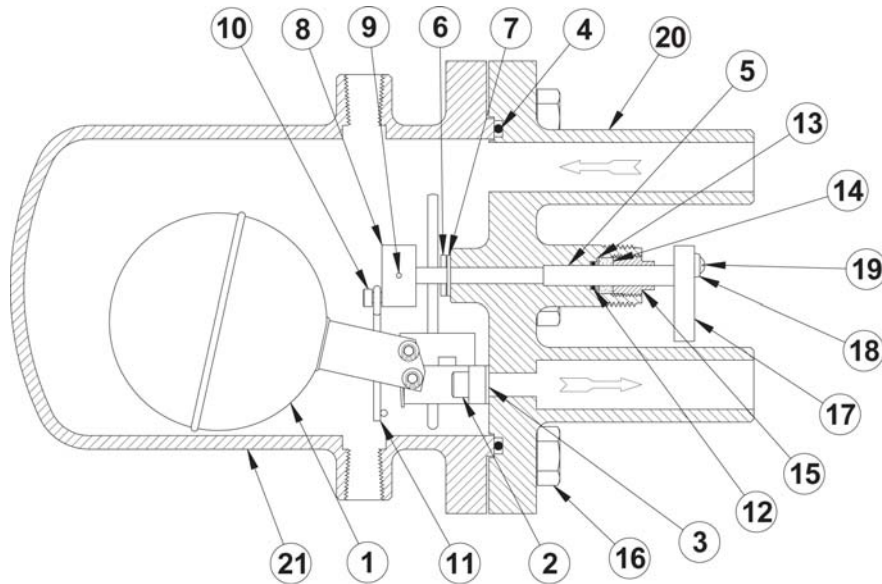

ITEM	DESCRIPTION	QTY.	HT100	HT200	HT300	FLOAT BALL REPLACEMENT KITS		
1	Float Ball Assembly *	¾	¾	¾	¾	HT100	HT200	HT300
	R717, 120 PSID (LN)	1	65-0112	65-0197	65-0148	65-1027	65-1021	65-1032
	R717, 200 PSID (MN)-Standard	1	65-0113	65-0198	65-0149	65-1003	65-1018	65-1023
	R717, 360 PSID (HN)	1	¾	65-0199	65-0150	¾	65-1022	65-1024
	R22, 120 PSID (LF)	1	65-0166	¾	¾	65-1028	¾	¾
	R22, 160 PSID (MF)-Standard	1	65-0165	65-0107	65-0124	65-1014	65-1004	65-1001
	R22, 300 PSID (HF)	1	65-0164	65-0108	65-0125	65-1029	65-1030	65-1031
2	Seat Screw	2	65-0024	65-0066	65-0066	The above Float Ball Replacement Kits include the Float Ball Assembly, Seat Screw, Seat Gasket, Housing O-ring, Cam Screw, and Manual-Opening Lifting Tee.		
3	Seat Gasket	1	65-0094	65-0094	65-0121			
4	Housing O-Ring	1	65-0022	65-0055	65-0056			
5	Stem	1	65-0073	65-0073	65-0073			
6	Stem Pin	1	65-0032	65-0032	65-0032			
7	Stem Washer	1	65-0034	65-0034	65-0034			
8	Cam	1	65-0074	65-0074	65-0074			
9	Cam Pin	1	65-0031	65-0031	65-0031			
10	Cam Screw	1	65-0067	65-0067	65-0067			
11	Manual-Opening Lifting Tee	1	65-0037	65-0088	65-0076			
12	Stem O-Ring	1	50-0179	50-0179	50-0179			
13	Packing Washer	1	50-0046	50-0046	50-0046			
14	Stem Packing	1	50-0045	50-0045	50-0045			
15	Packing Nut	1	50-0013	50-0013	50-0013			
16	Housing Screw for HT100	6	65-0023	¾	¾			
	Housing Screw for HT200	8	¾	65-0057	¾			
	Housing Screw for HT300	12	¾	¾	65-0058			
17	Manual-opening Handle	1	65-0035	65-0035	65-0092			
18	Washer	1	50-0129	50-0129	50-0129			
19	Screw	1	50-0028	50-0028	50-0028			
20	Flanged Housing	1	65-0039	65-0086	65-0084			
21	Body	1	65-0038	65-0083	65-0082			

* Float Ball Assembly includes the float ball plus replacement slide valve.